



ENGLISH

SMARTCODE 915

TOUCHSCREEN ELECTRONIC DEADBOLT

Installation and User Guide

Required tools

4 AA Batteries Ruler Phillips head screwdriver

Additional Tools (depending on application)

Hammer Wood block

Kwikset
1-800-327-5625
www.kwikset.com

Parts in the box		
Latch "B" is not included. If needed, please contact Kwikset to order a drive-in latch for your lock.	Interior Assembly Traditional Contemporary 	Exterior Touchscreen Traditional Contemporary
Strike 	Keys 	Fasteners 03809 46780 48654 49191 64109
Adapter Ring 	Mounting Plate 	SmartKey Tool

1 Prepare the door and check dimensions

If drilling a new door, use the supplied template and the complete door drilling instructions available at www.kwikset.com/doorprep.

A Measure to confirm that the hole in the door is either 2-1/8" (54 mm) or 1-1/2" (38 mm).


B Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

C Measure to confirm that the hole in the door edge is 1" (25 mm).

D Measure to confirm that the door is between 1-3/8" and 2" (35 mm and 51 mm) thick.

Note: Additional door preparation may be required for doors with 1-1/2" (38 mm) holes. Consult the deadbolt drilling instructions at www.kwikset.com/doorprep.

2 Install the latch and strike

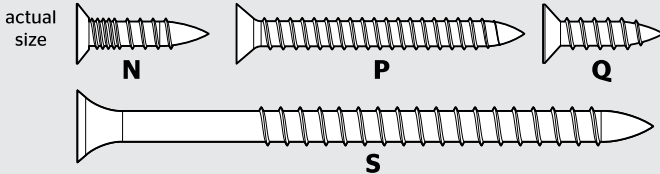

A Is the door edge chiseled?

YES

Use latch "A". If the latch bolt is not already extended, extend the latch bolt as shown.

NO

Use latch "B" (not included). If the latch bolt is not already extended, extend the latch bolt as shown.

B Hold the latch in front of the door hole, with the latch face flush against the door edge.

C Are the latch holes centered in the door hole?

YES

No adjustment is required. Proceed to next step.

NO

Rotate latch face as shown to extend latch.

D Which latch are you installing?

Latch "A"

or

 
Latch "B"

wood block


E Install strike on the door frame.

⚠ Make sure the hole in the door frame is drilled a minimum of 1" (25 mm) deep.

3 Install the exterior keypad




A What is the diameter of the hole in the door?

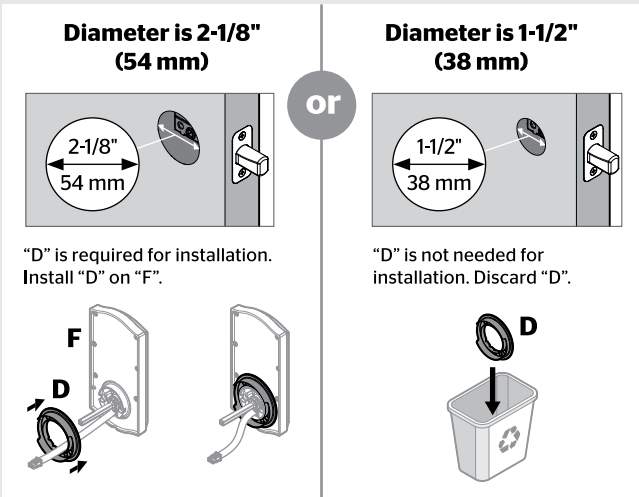


B Locate screws for step 3C and keep them within reach.




C Install exterior keypad and mounting plate.

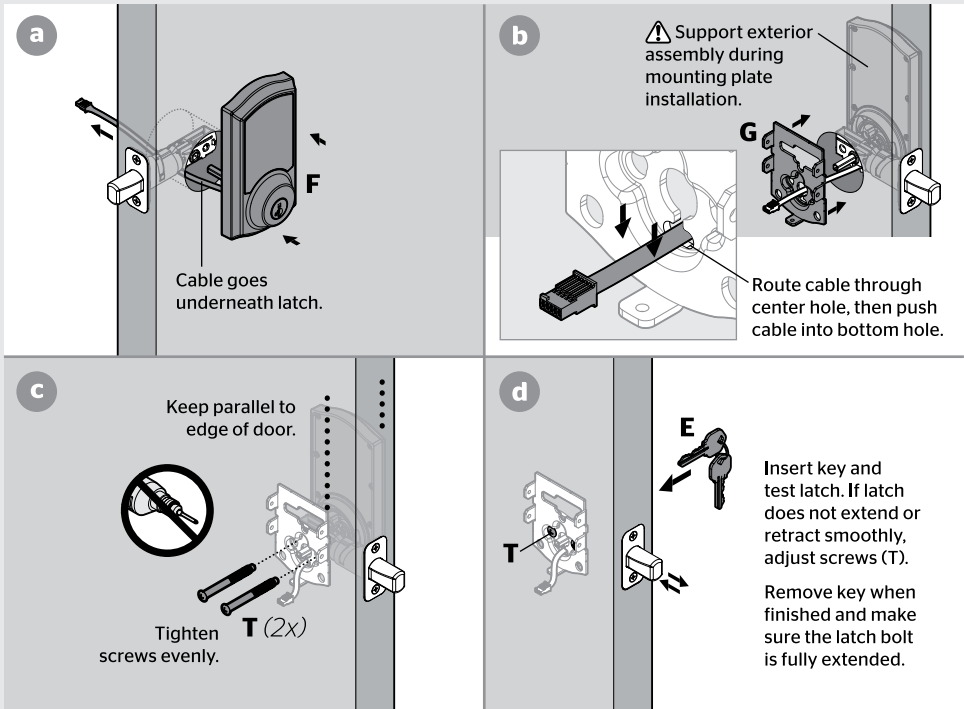


4 Install the interior assembly

 

A Remove battery cover and battery pack from interior assembly.

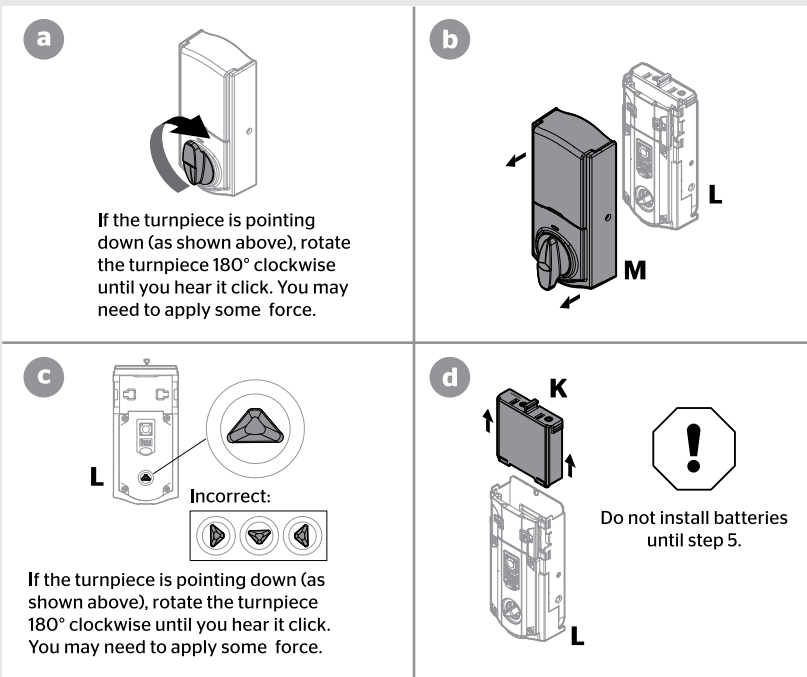


B Install interior assembly onto mounting plate.

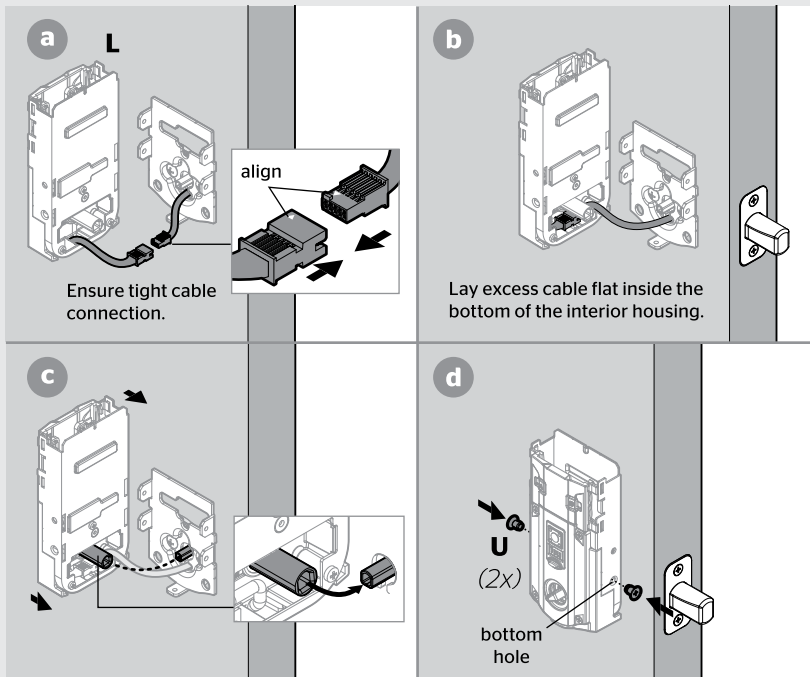


5 Set locking and unlocking direction

CAUTION: Your lock will not function properly if this step is not completed. This step will teach your lock the orientation of your door and is crucial to lock operation.


A Install 4 AA batteries in battery pack.

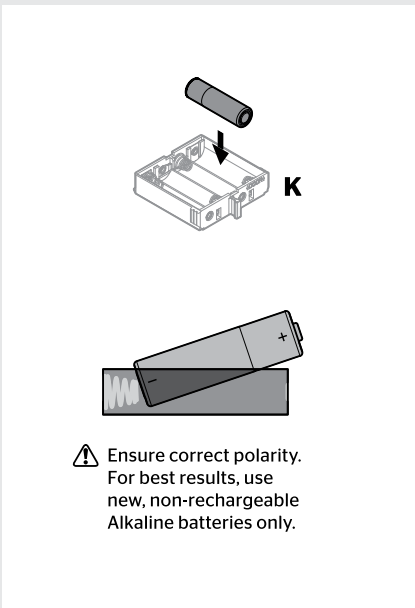

B Make sure the door is open, and insert the battery pack.

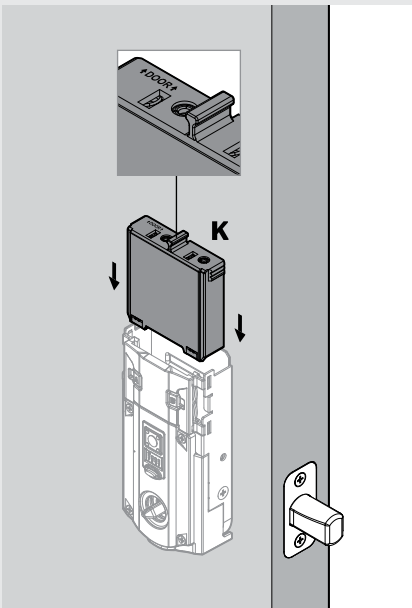

C After a few seconds, the latch bolt will retract and extend on its own to learn the orientation of the door. This is called the **door handing process**, and it is crucial to lock operation.

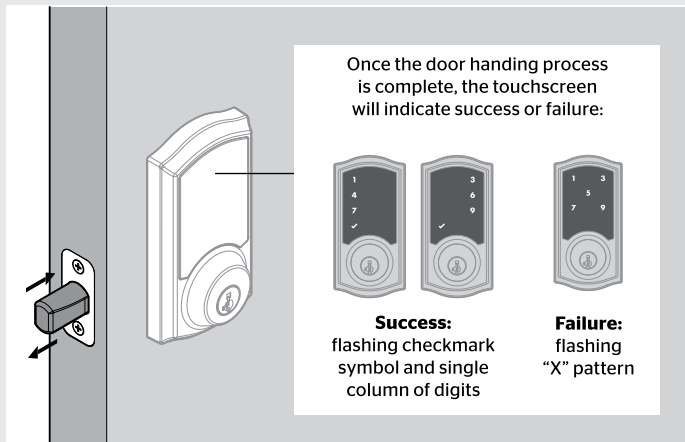

D If the touchscreen indicates a failure, attempt this procedure again.

If the door handing process is still unsuccessful after a second attempt, see the Manual Door Handing section on page 4.


6 Add user codes (16 max)

Programming Timeout

During programming, if the screen is not pressed for 20 seconds, the system will time out (indicated by three beeps and the “X” pattern flashing three times), and you will need to restart the procedure.


A

Make sure the door is open. Press the Program button once.

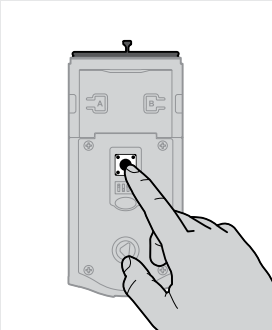

B

Press checkmark symbol once.

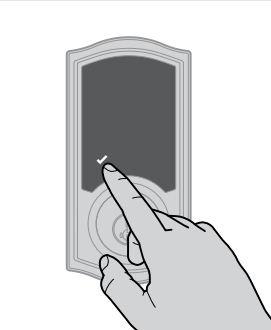

C

Enter user code. A total of 16 user codes may be programmed.



Each user code must be a unique code between 4 and 8 digits.

D

Press lock symbol once.



E

What digits and sounds did the lock produce?

Checkmark symbol with one beep



1x

Programming was successful.

or

“X” pattern with three beeps



3x

Programming was unsuccessful.

Make sure the user code is not a duplicate and that it is between 4 and 8 digits during your next attempt.

Make sure the lock has room for an additional code. If all user code positions are filled, delete a code to make room for this one.

*Beeping sound will only be heard if switch #3 (on the lock interior) is in the on position. See “Switches and Status LED Colors” on page 4.

Mastercode

For enhanced security, a mastercode may be used when adding and deleting user codes. For more information about the mastercode, download the Programming and Troubleshooting Guide on the SmartCode 915 page at www.kwikset.com.

7 Test the lock (review normal operation)

Confirm that the code(s) added in previous step can unlock the door.

Activating the Screen

Touch screen with palm or back of hand until digits illuminate.




Locking the Door

1. Activate the screen.
 2. Press Lock symbol.
- Note: If no user codes are programmed, the door cannot be locked via touchscreen.



Unlocking the Door

1. Activate the screen.
2. If SecureScreen™ is enabled, touch the random digits that appear.
3. Enter user code.

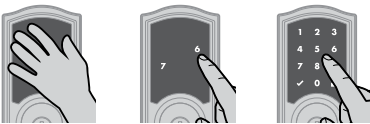

If you press the wrong digit while entering a user code, you can press the Lock symbol once to clear the digits entered previously and immediately restart the code entry process.

SecureScreen™

SecureScreen is an added-security feature that displays random digits before you enter a user code to unlock the door. This feature ensures that there are fingerprints on all digits so that codes cannot be identified by examining the touchscreen for finger prints.



 
If desired, this feature can be disabled by turning switch #4 to the off position. See “Switches” on page 4.

8 Install the interior cover


actual size 

Important Information about the interior cover

The window on the interior cover is locked by default to prevent someone from tampering with your lock's settings.



For easy access to the battery pack, unlock the window by removing the security screw.

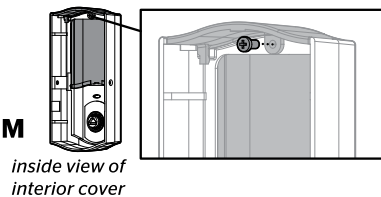


You can now slide up the window for more convenient access to the programming buttons and the battery pack while the cover is installed.




Cover Installation

a Install cover.

Note: You may need to rotate the turnpiece to align with the turnpiece shaft.

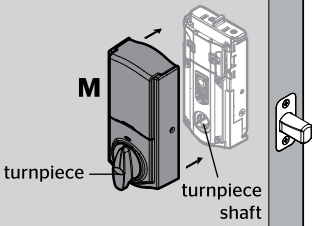


b Install screws.

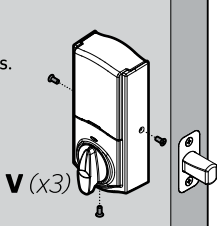

Battery Pack Access


If the window is unlocked, slide up the window to access the battery pack.

 If the window is locked, remove the interior cover and screws to access the battery pack.




SmartCode at a Glance

Exterior

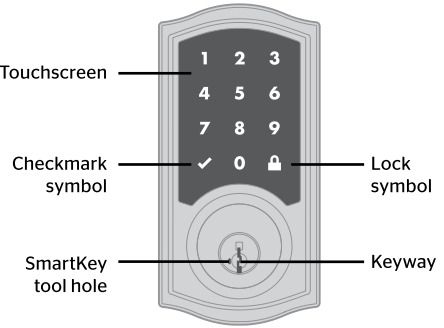


Interior (cover removed)

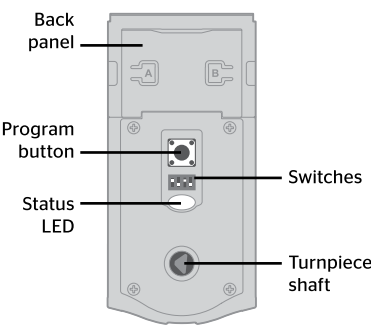


Note: When the cover is removed, the turnpiece shaft can be used to manually lock and unlock the door.

Re-key the lock (if needed)


a IMPORTANT: Remove battery pack before re-keying.

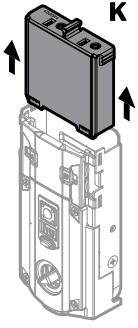

b Re-key the lock to work with your existing key. See the supplied SmartKey Re-key instructions for more information.

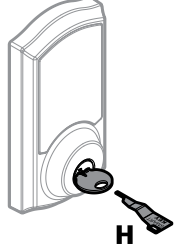


c Reinstall battery pack.

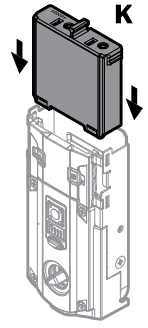


Switches and Status LED Colors

Switches

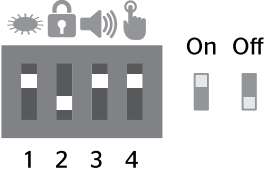

1 2 3 4

 Status LED



Switch	Function	Color	Lock Status
1	Door lock status LED blinks every 6 seconds	Blinking green	Unlocked
2	Lock automatically re-locks door 30 seconds after unlocking. Disabled if no codes are programmed.		
3	Audio	Blinking amber	Locked
4	SecureScreen feature displays random digits to be pressed before entering user code. This added-security feature ensures that there are fingerprints on all digits so that codes cannot be identified by examining the touchscreen for fingerprints.	Blinking red	Low battery

System Alerts


Display	Alert	Reason	Solution
	"X" pattern flashes one time with one beep*.	One incorrect code entered.	Re-enter code.
	"X" pattern flashes three times with three beeps*.	No user code programmed.	Program at least one user code.
		Programming timeout after 20 seconds.	Attempt programming procedure again.
	Unsuccessful programming.		
	"X" pattern flashes 15 times with 15 beeps*.	Three incorrect codes entered within one minute.	Re-enter code after 60 second touchscreen lockout.
	Checkmark and lock symbols flash simultaneously five times with long continuous beep*.	Low battery.	Replace batteries.
		Checkmark and lock symbols alternate flashing five times with long continuous beep*.	Door jammed while attempting to lock.
N/A	Lock beeps continuously.	Interior assembly is disconnected from exterior.	Remove battery pack, reconnect the interior to the exterior, then replace battery pack.

*Beeping sound will only be heard if switch #3 is on.

Deleting a single user code

Note: All codes may be deleted at once if the mastercode is enabled. For more information about the mastercode, consult the online Programming and Troubleshooting Guide.

 1 Keep door open. Press Program button once.



2 Press Checkmark symbol once.



3 Press Lock symbol once.



 
4 Enter user code to be deleted.



5 Press Lock symbol once.



6 Re-enter user code.



7 Press Lock symbol once.



If unsuccessful
Make sure to enter the same valid code in steps 4 and 6.
⚠ Test code
While the door is open, test the user code to make sure it no longer unlocks the door.

If the screen is not pressed for 20 seconds, the system will time out, and you will need to restart the procedure.


Factory Reset

A factory reset will delete all codes associated with the lock.

1 Remove battery pack.



2 Press and HOLD the Program button while reinserting the battery pack. Keep holding the button for 30 seconds until the lock beeps and the status LED flashes red.

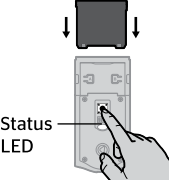

3 Press the Program button once more. The status LED will flash green and red several times.



4 After a few seconds, the lock will initiate the door handing process, and the latch bolt will extend and retract to learn the orientation of the door.

 
Manual Door Handing

If needed, the door handing process can be initiated manually. This is useful if the lock is being moved to a different door.


1 Remove battery pack.



2 Press and HOLD the Program button while reinserting the battery pack. Release button once battery pack is installed. The status LED will flash red and green.



3 Press the Program button once more.

 

4 The latch bolt will extend and retract to learn the orientation of the door.



Success



Failure

If the touchscreen indicates a failure, see the online Programming and Troubleshooting Guide.

Important Safeguards

1. Read all instructions in their entirety.

2. Familiarize yourself with all warning and caution statements.

3. Remind all family members of safety precautions.

4. Protect your user codes and mastercode.

5. Dispose of used batteries according to local laws and regulations.

⚠ CAUTION: Prevent unauthorized entry. Since anyone with access to the back panel can change the user codes, you must restrict access to the back panel and routinely check the user codes to ensure they have not been altered without your knowledge. The use of a mastercode can help protect your system's settings.

⚠ WARNING: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

4 / 4

© 2019 Spectrum Brands, Inc.