


# TEMPLATE FOR PREPARATION AND INSTALLATION OF DECORATIVE TRIM ROSETTE

**1**  
FOLD HERE  
ON DOOR EDGE



**4** MARK  
CENTER OF  
1" (25mm) HOLE  
IN DOOR EDGE

FOR  
1-3/4"  
(44mm)  
THICK  
DOOR


FOR  
1-3/8"  
(35mm)  
THICK  
DOOR

**2-3/8" (60mm) BACKSET**

**2-3/4" (70mm) BACKSET**

**3**  
MARK CENTER OF  
2-1/8" (54mm) HOLE  
ON DOOR FACE

FOLD HERE AND PLACE ON LOW EDGE OF DOOR BEVEL

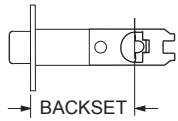

**4** MARK  
CENTER OF  
1" (25mm) HOLE  
IN DOOR EDGE

FOR  
1-3/4"  
(44mm)  
THICK  
DOOR

FOR  
1-3/8"  
(35mm)  
THICK  
DOOR

**2-3/8" (60mm) BACKSET**

**2-3/4" (70mm) BACKSET**

**3**  
MARK CENTER OF  
2-1/8" (54mm) HOLE  
ON DOOR FACE

**3-5/8" (92mm)**

**2**  
Place  
Approx.  
36"  
(914mm)  
From Floor