



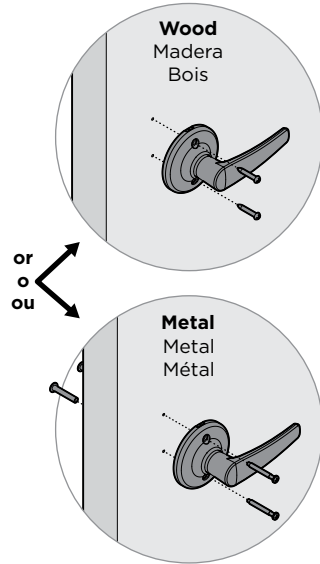


Pre-Assembled Knob/Lever

Perilla/palanca pre ensamblada • Bouton/Levier pré-assemblé

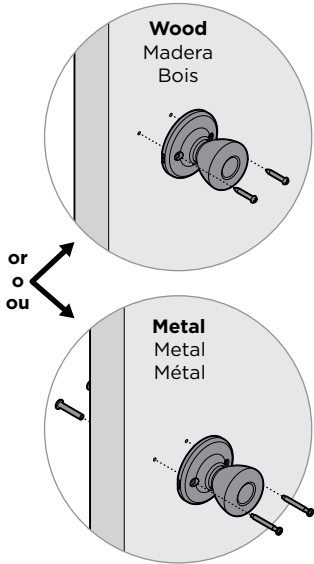

Assembly Required Lever

Palanca con montaje requerido • Montage requis pour le levier

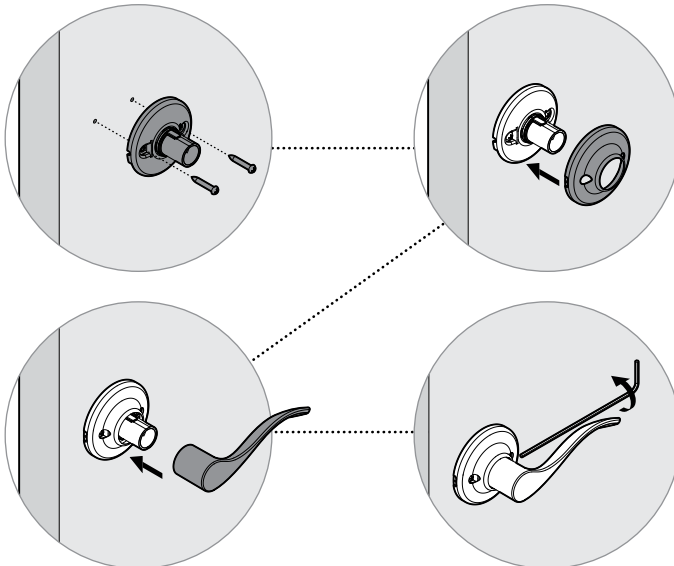


Drilling Instructions (if required)

Instrucciones de Perforación (si es necesario)
Instructions de perçage (si nécessaire)




1/4" (6 mm)

3/32" (2 mm)

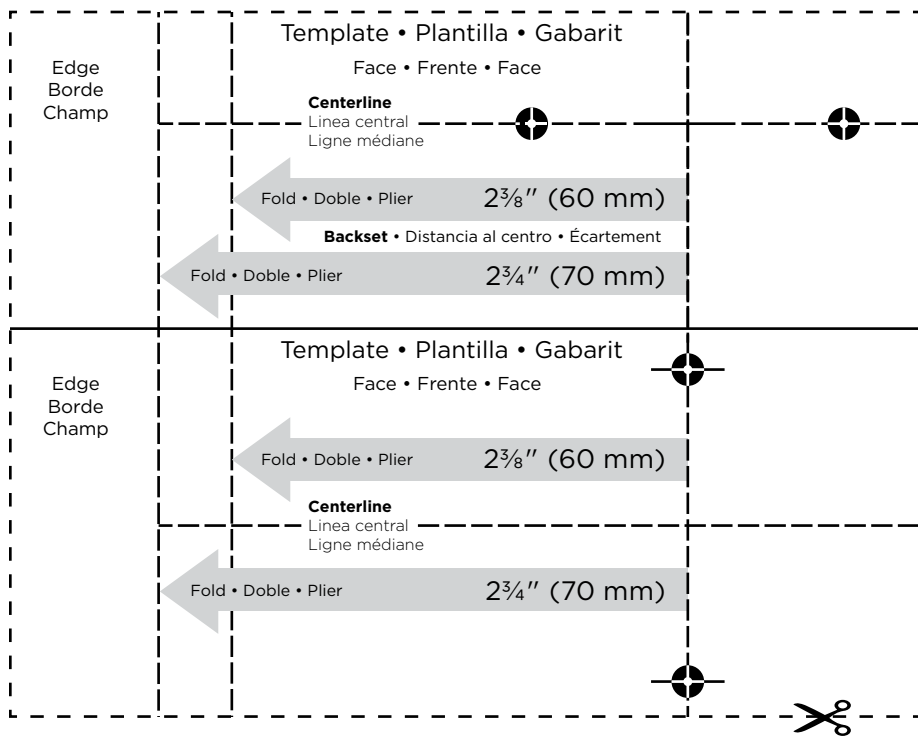

1

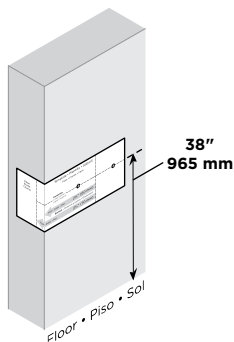


Select template, and fold template along fold line with desired backset. Place fold line along the edge of door with the centerline approximately 38" (965mm) from floor.

Seleccione la plantilla y doble la plantilla a lo largo del doblez con la distancia al centro deseada. Coloque el doblez a lo largo del borde de la puerta con la línea central a unas 38" (965mm) del suelo.

Choisir le gabarit et plier le gabarit le long de la ligne de pliage avec écartement désirée. Placer la ligne de pliage le long du bord de la porte, avec l'axe à environ 38" (965 mm) du sol.

2

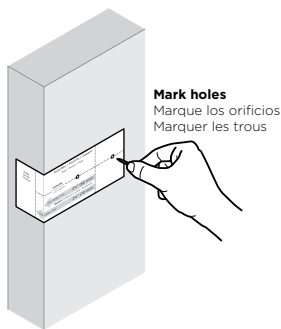

3

